
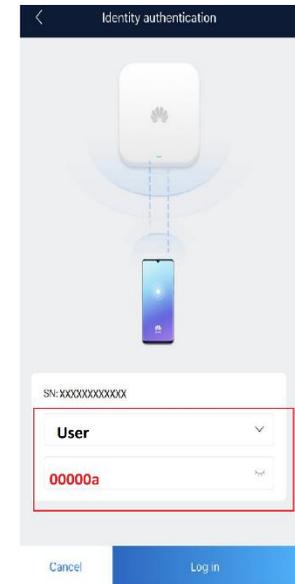
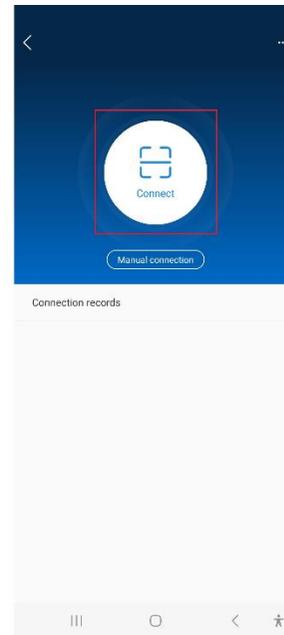
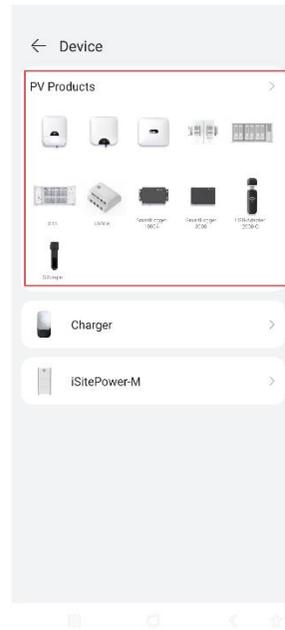






1. Login on the inverter with FusionSolar APP

Login with your account from Fusion Solar, choose Me → Commissioning and log in as USER with the default password 00000a.

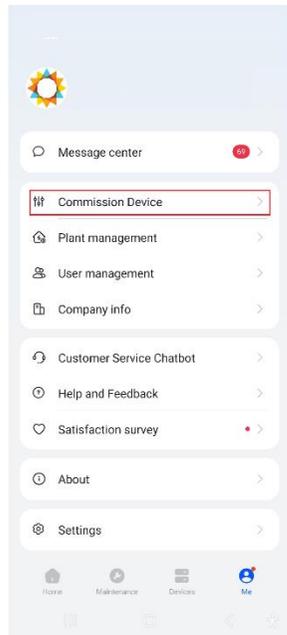

2. Set the Wi-Fi Network

After you logged in, choose “...” from the right top corner → Settings → Router connection settings → select your WiFi network and insert the password → Connect

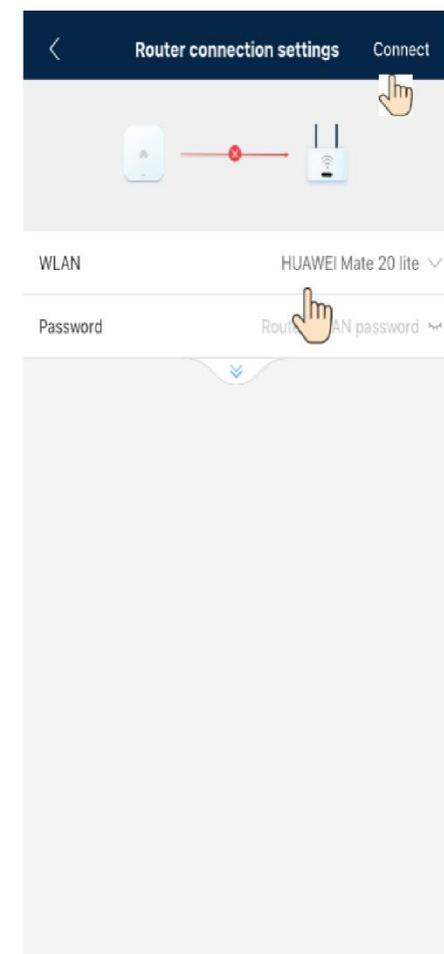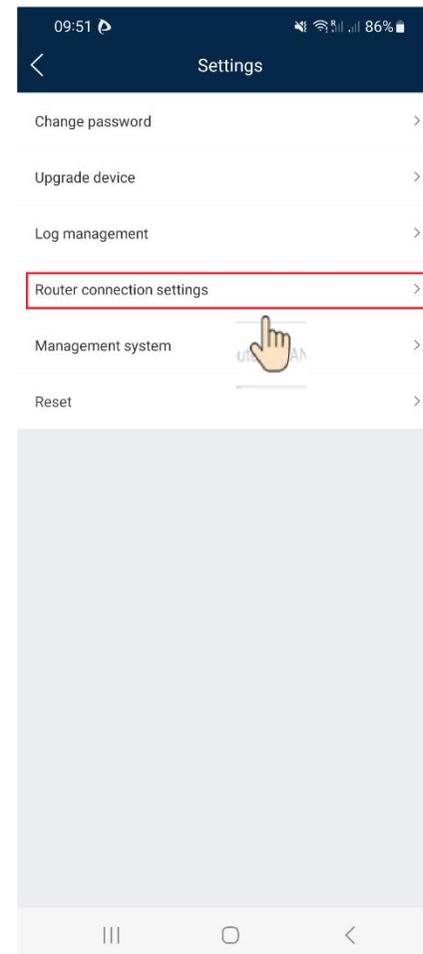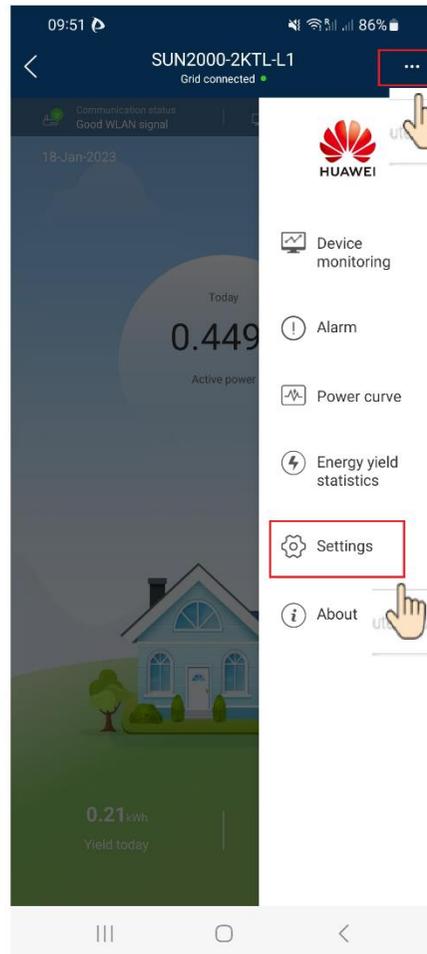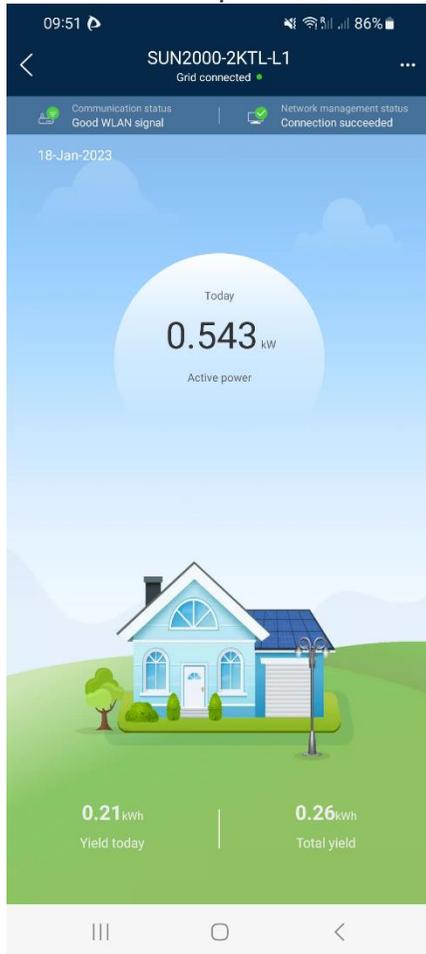

3. Check the connection status

